# Smart Laser Sensors

CSM\_E3NC\_DS\_E\_9\_4

## Ideal for Applications That Cannot Be Handled with Fiber Sensors or Photoelectric Sensors

 The lineup includes E3NC-L Sensors, which are ideal for presence detection, and E3NC-S Sensors, which are ideal for discriminations.


- E3NC-L Sensors are available in Coaxial Retro-reflective Models, Long-distance Variable-spot Diffuse-reflective Models, and Small-spot Limited-reflective Models.
- The E3NC-S Sensors include CMOS and provide stable detection of workpieces with different colors and inclined installation.
- Smart Tuning to achieve stable detection with easy setup.
- White on black display characters for high visibility.
- Flexible robot cables are used for the Sensor Heads.

Refer to the *Safety Precautions* on page 14.

## Features

#### **Retro-reflective Models: E3NC-LH03**

- Maximum sensing distance of 8 m.
- Stable detection of many types of workpieces.
- Stable detection of highly transparent films.

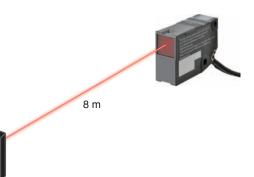




#### Diffuse-reflective Models: E3NC-LH02 PATP

- Long-distance detection at up to 1.2 m.
- · Spot can be adjusted to the workpiece or application.



# CMOS Laser, Reflective Models: E3NC-SH250H/SH250/SH100

Stable detection even for different workpiece colors and materials.
Stable detection for inclined Head installation and different workpiece shapes.

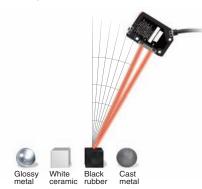

#### **Amplifier Units**

- Same shape as Fiber Amplifier Units plus easy operation.
- Smart Tuning with one button.



## **Ordering Information**

## Sensor Heads: E3NC-L Compact Laser Sensor Series (Dimensions → page 17)

Sensing method	Appearance	Beam shape	Sensing	l distance	Laser class	Cable length	Model
Coaxial Retro-		Spot		<b>8</b> m *		2 m	E3NC-LH03 2M
reflective with MSR function		Spot		)0 III		5 m	E3NC-LH03 5M
Diffuse-		Variable spot				2 m	E3NC-LH02 2M
reflective			vanable spor	Valiable spot	))	1.2 m	Class 1
Limited-		Snot	70±15			2 m	E3NC-LH01 2M
reflective	I.	Spot	/0±15			5 m	E3NC-LH01 5M

These values apply when an E39-R21, E39-R22, E39-RS10, or E39-RS11 Reflector is used. A Reflector is not included. Purchase a Reflector separately to match the intended use of the Sensor.
 Note: Only an E3NC-LA Amplifier Unit can be connected.

## Amplifier Units: E3NC-L Compact Laser Sensor Series (Dimensions → page 19)

Connecting method	Appearance	Inputs/outputs Model		odel
Connecting method	Appearance	inputs/outputs	NPN output	PNP output
Pre-wired (2 m)	<b>F</b>	2 outputs + 1 input	E3NC-LA21 2M	E3NC-LA51 2M
Wire-saving Connector	<b>F</b>	1 output + 1 input	E3NC-LA7	E3NC-LA9
M8 Connector		1 output + 1 input	E3NC-LA24	E3NC-LA54
Connector for Sensor Communications Unit *			E3NC-LA0	

\* A Sensor Communications Unit is required if you want to use the Amplifier Unit on a network.

Note: Only an E3NC-LH Sensor Head can be connected.

## Sensor Heads: E3NC-S Ultra-compact CMOS Laser Sensor Series (Dimensions → page 18)

Sensing method	Appearance	Beam shape	Measurement range	Laser class	Cable length	Model
Distance- settable	Spot		Class 2	2 m	E3NC-SH250H 2M	
		Spot	35 to 250 mm		2 m	E3NC-SH250 2M
			35 to 100 mm	Class 1	2 m	E3NC-SH100 2M

Note: Only an E3NC-SA Amplifier Unit can be connected.

Connecting method	Appearance	Innuto/outputo	М	odel
Connecting method	Appearance	Inputs/outputs	NPN output	PNP output
Pre-wired (2 m)		2 outputs + 1 input	E3NC-SA21 2M	E3NC-SA51 2M
Wire-saving Connector		1 output + 1 input	E3NC-SA7	E3NC-SA9
M8 Connector		1 output + 1 input	E3NC-SA24	E3NC-SA54
Connector for Sensor Communications Unit *			E3NC-SA0	

\* A Sensor Communications Unit is required if you want to use the Amplifier Unit on a network. **Note:** Only an E3NC-SH or E3NC-SH H Sensor Head can be connected.

#### Accessories (Sold Separately) Sensor Head Accessories

Reflectors (Required for Retro-reflective Sensors) (Dimensions → page 21) A Reflector is not provided with the Sensor Head. It must be ordered separately.



Note: Refer to the Safety Precautions on page 14 for how to attach the reflector.

#### Sensor Head Mounting Brackets (Dimensions → page 22) A Mounting Bracket is not provided with the Sensor Head. It must be ordered separately as required.

# Lens Attachments for Sensor Heads (Dimensions $\rightarrow$ page 21)

A Lens Attachment is not provided with the Sensor Head. It must be ordered separately as required.

Applicable Sensor Head	Appearance	Model	Quantity
E3NC-LH03		E39-P51	1
E3NC-LH02		E39-P52	1

**Note:** You can combine the Lens Attachment with an applicable Sensor Head to create a line beam.

Applicable Sensor Head	Appearance	Model	Quantity	Contents
E3NC-LH03		E39-L190		
E3NC-LH02		E39-L185		
E3NC-LH01		E39-L186	1	Mounting Bracket: 1 Nut plate: 1 Phillips screws (M3×18): 2
E3NC-SH250H E3NC-SH250		E39-L187		
E3NC-SH100		E39-L188		

#### **Amplifier Unit Accessories**

Wire-saving Connectors (Required for models for Wire-saving Connectors.) (Dimensions  $\rightarrow$  page 26) Connectors are not provided with the Amplifier Unit and must be ordered separately. \*Protective stickers are provided.

Туре	Appearance	Cable length	No. of conductors	Model
Master Connector	*	2 m	4	E3X-CN21
Slave Connector	5	2 111	2	E3X-CN22

#### Sensor I/O Connectors (Required for models for M8 Connectors.) (Dimensions → page 26) Connectors are not provided with the Amplifier Unit and must be ordered separately.

Size	Cable	Appearance		Cable	e type	Model
		Straight		2 m		XS3F-M421-402-A
M8	Standard cable	0	aight	5 m	XS3F-M421-405-A	
IVIO	Stanuaru cable	L-shaped		2 m	4-wire	XS3F-M422-402-A
_				5 m		XS3F-M422-405-A

## Amplifier Unit Mounting Bracket (Dimensions $\rightarrow$ page 27) A Mounting Bracket is not provided with the Amplifier Unit. It must be ordered separately as required.

Appearance	Model	Quantity
Contraction of the second seco	E39-L143	1

#### DIN Track (Dimensions → page 27)

A DIN Track is not provided with the Amplifier Unit. It must be ordered separately as required.

Appearance	Туре	Model	Quantity
	Shallow type, total length: 1 m	PFP-100N	
	Shallow type, total length: 0.5m	PFP-50N	1
	Deep type, total length: 1 m	PFP-100N2	

End Plate (Dimensions  $\rightarrow$  page 27) Two End Plates are provided with the Sensor Communications Unit. End Plates are not provided with the Amplifier Unit. They must be ordered separately as required.

Appearance	Model	Quantity
6	PFP-M	1

#### Cover

Attach these Covers to Amplifier Units. Order a Cover when required, e.g., if you lose the covers.

Appearance	Model	Quantity
J	E39-G24 FOR E3NC-LA	1
	E39-G21 FOR E3NC-SA	

## **Related Products**

**Sensor Communications Units** 

Туре	Appearance	Model
Sensor Communications Unit for EtherCAT		E3NW-ECT
Sensor Communications Unit for CompoNet	and the second s	E3NW-CRT
Sensor Communications Unit for CC-Link	and the second s	E3NW-CCL
Distributed Sensor Unit *	and the second s	E3NW-DS

EtherCAT<sup>®</sup> is a registered trademark and patented technology, licensed by Beckhoff Automation GmbH, Germany.

CompoNet is a registered trademark of the ODVA. CC-Link is a registered trademark of Mitsubishi Electric Corporation. The trademark is managed by the CC-Link Partner Association.

## **Ratings and Specifications**

## Compact Laser Sensors: E3NC-L

#### **Sensor Heads**

	Sensir	ng method		ro-reflective R function	Diffuse-	reflective	Limited- reflective	
Item		Model	E3NC-LH03	E3NC-LH03+ E39-P51	E3NC-LH02	E3NC-LH02+ E39-P52	E3NC-LH01	
Light source	(wavelength)	*1		or laser diode (660 n N Class 1, and FDA 0		ge output: 315 μW)		
	Giga-power (GIGA)	mode	8 m		1,200 mm	1,000 mm		
Sensing	Standard mo	ode (Stnd)	6 m	0.5 m	750 mm	600 mm	70±15 mm	
distance*2	High-speed	mode (HS)	3.5 m	0.5 11	250 mm	200 mm	70±15 mm	
	Super-high-s mode (SHS)	speed	2 m		200 mm	150 mm		
Beam shape			Spot	Line	Spot	Line	Spot	
Beam size*3			Approx. 2 mm dia. at 1 m	Line length: Approx. 25 mm at 250 mm Line length: Approx. 50 mm at 500 mm	Approx. 0.8 mm dia. at 300 mm	Line length: Approx. 45 mm at 500 mm Line length: Approx. 100 mm at 1,000 mm	Approx. 0.1 mm dia. at 70 mm	
Differential d	istance*4		-		10% of sensing dist	ance max.		
Indicators			OUT indicator (oran	ge) and STABILITY i	ndicator (green)			
Ambient illun	nination (Rece	eiver side)	Incandescent lamp: Sunlight: 20,000 lx r					
Ambient tem	perature rang	e	Operating: -10 to 55°C; Storage: -25 to 70°C (with no icing or condensation)					
Ambient hum	nidity range		Operating and storage: 35% to 85% (with no condensation)					
Altitude			2,000 m max.					
Installation e	nvironment		Pollution degree 3 (as per IEC 60947-1)					
Insulation res	sistance		20 MΩ min. (at 500 VDC)					
Dielectric str	ength		1,000 VAC at 50/60	Hz for 1 min				
Vibration res	istance (destr	uction)	10 to 55 Hz with a 1.5-mm double amplitude or 100 m/s² for 2 hours each in X, Y, and Z directions					
Shock resista	ance (destruc	tion)	500 m/s <sup>2</sup> for 3 times	each in X, Y, and Z	directions			
Degree of pro	otection		IEC IP67*5		IEC IP65 (E3NC-LH locked.)*5	102: Applies only whe	n adjuster is	
Connecting r	nethod		Pre-wired connector	r (standard length: 2 i	m)			
	_	Case	Polybutylene terephthalate (PBT)					
	Sensor Head	Lens	Methacrylic resin (P	MMA)				
Materials		Cable	Vinyl chloride (PVC)	)			-	
	Lens	Case		ABS		ABS		
	Attachment	Lens		Methacrylic resin (PMMA)		Methacrylic resin (PMMA)		
	Models with	2-m cable	Approx. 120 g/appro	ox. 70 g	Approx. 115 g/appr	ox. 65 g		
Weight (packed state/Sensor	Models with	5-m cable	Approx. 180 g/appro	ox. 130 g	Approx. 175 g/appr	ox. 125 g		
Head only)	Lens Attachn	nent		Approx. 25 g/ approx. 2 g		Approx. 25 g/ approx. 2 g		
Accessories			Instruction Manual	1	1	ı	1	

These Sensors are classified as Class 1 laser devices under IEC 60825-1 and the regulations of Laser Notice No. 50 for FDA certification. CDRH (Center for De-\*1. vices and Radiological Health) registration has been completed.

E3NC-LH01, E3NC-LH02 (Accession Number: 1220690) E3NC-LH03 (Accession Number: 1320739)

\*2. The values were measured using the OMRON standard sensing object (white paper) for the E3NC-LH01, E3NC-LH02, and E3NC-LH02 + E39-P52. The values for the E3NC-LH03, and E3NC-LH03 + E39-P51 apply when an E39-R21, E39-R22, E39-RS10, or E39-RS11 Reflector is used. Other Reflectors are

not recommended. Defined at the  $1/e^2$  (13.5%) of the central intensity at the measurement distance.

\*3.

Measurement may be influenced if there is light leakage outside the defined region and the surroundings of the target object have a high reflectance in comparison to the target object.

\*4. Measured at the rated sensing distance.

\*5. The E39-P5 contains a packing to prevent entry of foreign matter. The degree of protection between the E3NC-LH and E39-P5 is not specified.

#### **Amplifier Units**

		Туре		Standard models		Model for Sensor Communications Unit		
	NPN	output	E3NC-LA21	E3NC-LA7	E3NC-LA24			
		output	E3NC-LA51	E3NC-LA9	E3NC-LA54	E3NC-LA0		
ltem	Connect	ing method	Pre-wired	Wire-saving Connector	M8 Connector	Connector for Sensor Communications Unit		
Inputs/	Outputs		2 outputs	1 output		+4		
outputs	External inputs		1 input			*1		
Power supply	y voltage *2		10 to 30 VDC, including	10% ripple (p-p)		Supplied from the connector through the Sensor Communications Unit		
Power consu	mption *3		Eco ON: 1,320 mW max	e of 24 VDC / max. (Current consumption: 6 (Current consumption: 55 m/ . (Current consumption: 60 mA	A max.)			
			Load power supply volta Load current: Groups of Amplifier Units: 20 mA m	ge: 30 VDC max., open-collec 1 to 3 Amplifier Units: 100 mA nax.	tor output max., Groups of 4 to 30			
Control outp	uts*4		Residual voltage: At load current of less At load current of 10	s than 10 mA: 1 V max. to 100 mA: 2 V max.		-		
			OFF current: 0.1 mA max.					
External inpu	its		Refer to *5.					
Indicators			Display direction: Switch	o digital display: green, Main d able between normal and reve L/D indicator (orange), ST indio n models with 2 outputs)	ersed.	or (green), and OUT selection		
Protection ci	rcuits		Power supply reverse po output reverse polarity p	Power supply reverse polarit protection and output short- circuit protection				
	Super-high-speed mode	(SHS)*6	Operate or reset: 80 µs					
Response	High-speed mode (HS)		Operate or reset: 250 µs					
time	Standard mode (Stnd)		Operate or reset: 1 ms					
	Giga-power mode (GIGA	N)	Operate or reset: 16 ms					
Sensitivity ad	djustment			ning, full auto tuning, position % to +99%)), or manual adjustr		vity tuning, power tuning, or		
Maximum connectable Units		30			With E3NW-ECT: 30 units *			
Super bigh aread made (SHS)*6			30			With E3NW-CRT: 16 units With E3NW-CCL: 16 units		
No. of Units	Super-high-speed mode	(SHS)*6	0			With E3NW-CRT: 16 units		
for mutual	1	(SHS)*6				With E3NW-CRT: 16 units		
for mutual interference	Super-high-speed mode	(SHS)*6	0			With E3NW-CRT: 16 units		
for mutual interference	Super-high-speed mode High-speed mode (HS)		0 2			With E3NW-CRT: 16 units		
for mutual interference	Super-high-speed mode High-speed mode (HS) Standard mode (Stnd)	A)	0 2 2 4 Provided			With E3NW-CRT: 16 units With E3NW-CCL: 16 units		
for mutual interference	Super-high-speed mode High-speed mode (HS) Standard mode (Stnd) Giga-power mode (GIGA	A)	0 2 2 4 Provided	ed, OFF-delay, ON-delay, one-	shot, or ON-delay + OFF	With E3NW-CRT: 16 units With E3NW-CCL: 16 units		
or mutual nterference	Super-high-speed mode High-speed mode (HS) Standard mode (Stnd) Giga-power mode (GIGA Dynamic power control Timer Zero reset	A)	0 2 2 4 Provided Select from timer disable Negative values can be o	displayed. (Threshold value is	shifted.)	With E3NW-CRT: 16 units With E3NW-CCL: 16 units		
or mutual nterference	Super-high-speed mode High-speed mode (HS) Standard mode (Stnd) Giga-power mode (GIGA Dynamic power control Timer Zero reset Resetting settings*8	A)	0 2 2 4 Provided Select from timer disable Negative values can be o		shifted.)	With E3NW-CRT: 16 units With E3NW-CCL: 16 units		
or mutual nterference	Super-high-speed mode High-speed mode (HS) Standard mode (Stnd) Giga-power mode (GIGA Dynamic power control Timer Zero reset	A)	0 2 2 4 Provided Select from timer disable Negative values can be Select from initial reset (	displayed. (Threshold value is	shifted.) (saved settings).	With E3NW-CRT: 16 units With E3NW-CCL: 16 units		
or mutual nterference orevention	Super-high-speed mode High-speed mode (HS) Standard mode (Stnd) Giga-power mode (GIGA Dynamic power control Timer Zero reset Resetting settings*8 Eco mode*9 Bank switching	A)	0 2 2 4 Provided Select from timer disable Negative values can be o Select from initial reset ( Select from OFF (digital Select from banks 1 to 4	displayed. (Threshold value is factory defaults) or user reset display lit), ECO ON (digital di	shifted.) (saved settings).	With E3NW-CRT: 16 units With E3NW-CCL: 16 units		
for mutual nterference orevention	Super-high-speed mode High-speed mode (HS) Standard mode (Stnd) Giga-power mode (GIGA Dynamic power control Timer Zero reset Resetting settings*8 Eco mode*9 Bank switching Power tuning	A)	0 2 2 4 Provided Select from timer disable Negative values can be Select from initial reset ( Select from OFF (digital Select from banks 1 to 4 Select from ON or OFF.	displayed. (Threshold value is factory defaults) or user reset display lit), ECO ON (digital di	shifted.) (saved settings). splay not lit), and ECO L	With E3NW-CRT: 16 units With E3NW-CCL: 16 units		
No. of Units for mutual interference prevention	Super-high-speed mode High-speed mode (HS) Standard mode (Stnd) Giga-power mode (GIGA Dynamic power control Timer Zero reset Resetting settings*8 Eco mode*9 Bank switching	A)	0 2 2 4 Provided Select from timer disable Negative values can be Select from initial reset ( Select from OFF (digital Select from banks 1 to 4 Select from ON or OFF.	displayed. (Threshold value is factory defaults) or user reset display lit), ECO ON (digital di	shifted.) (saved settings). splay not lit), and ECO L	With E3NW-CRT: 16 units With E3NW-CCL: 16 units		
for mutual interference prevention	Super-high-speed mode High-speed mode (HS) Standard mode (Stnd) Giga-power mode (GIGA Dynamic power control Timer Zero reset Resetting settings*8 Eco mode*9 Bank switching Power tuning	A)	0 2 2 4 Provided Select from timer disable Negative values can be Select from initial reset ( Select from OFF (digital Select from banks 1 to 4 Select from ON or OFF.	displayed. (Threshold value is factory defaults) or user reset display lit), ECO ON (digital di ection Mode or Area Detection	shifted.) (saved settings). splay not lit), and ECO L	With E3NW-CRT: 16 units With E3NW-CCL: 16 units delay timer: 1 to 9,999 ms O (digital display dimmed).		
for mutual interference prevention	Super-high-speed mode High-speed mode (HS) Standard mode (Stnd) Giga-power mode (GIGA Dynamic power control Timer Zero reset Resetting settings*8 Eco mode*9 Bank switching Power tuning Output 1	A)	0 2 2 4 Provided Select from timer disable Negative values can be Select from initial reset ( Select from OFF (digital Select from Danks 1 to 4 Select from Norral Dete Select from Normal Dete Select from Normal detection mode, alarm output mode, or error output mode.	displayed. (Threshold value is factory defaults) or user reset display lit), ECO ON (digital di ection Mode or Area Detection	shifted.) (saved settings). splay not lit), and ECO L Mode.	With E3NW-CRT: 16 units With E3NW-CCL: 16 units F-delay timer: 1 to 9,999 ms O (digital display dimmed).		

Two sensor outputs are allocated in the programmable logic controller PLC I/O table.
 PLC operation via Communications Unit enables reading detected values and changing settings.
 \*2. Applicable Sensor Head is the series of E3NC-LH□ (Input/Output 10-30V DC Class 2)
 \*3. At Power Supply Voltage of 10 to 30 VDC. Normal mode: 1,650 mW max. (Current consumption: 55 mA max. at 30 VDC, 115 mA max. at 10 VDC) Eco ON: 1,410 mW max. (Current consumption: 47 mA max. at 30 VDC, 95 mA max. at 10 VDC) Eco LO: 1,530 mW max. (Current consumption: 51 mA max. at 30 VDC, 105 mA max. at 10 VDC)
 \*4. The table for mediating the 0 model in the programma of the programma and the programma of the programma

\*4. The total for both outputs of a model with 2 outputs is 100 mA max. (Residual voltage: Load current of less than 10 mA: 1 V max., Load current of 10 to 100 mA: 2 V max.). \*5. The following details apply to the input.

	Contact input (relay or switch)	Non-contact input (transistor)	Input time*5-1
NPN	ON: Shorted to 0 V (Sourcing current: 1 mA max.). OFF: Open or shorted to Vcc.	ON: 1.5 V max. (Sourcing current: 1 mA max.) OFF: Vcc – 1.5 V to Vcc (Leakage current: 0.1 mA max.)	ON: 9 ms min.
PNP	ON: Shorted to Vcc (Sinking current: 3 mA max.). OFF: Open or shorted to 0 V.	ON: Vcc – 1.5 V to Vcc (Sinking current: 3 mA max.) OFF: 1.5 V max. (Leakage current: 0.1 mA max.)	OFF: 20 ms min.

\*5-1.Input time is 25 ms (ON)/(OFF) only when (in tUnE) or (in PtUn) input is selected.
\*6. The mutual interference prevention function is disabled if the detection mode is set to super-high-speed mode.
\*7. When connected to an OMRON NJ-series Controller.
\*8. The bank is not reset by the user reset function or saved by the user save function.
\*9. Eco LO is supported for Amplifier Units manufactured in July 2014 or later.

	Туре		Model for Sensor Communications Unit				
	NPN output	E3NC-LA21 E3NC-LA7 E3N0		E3NC-LA24			
	PNP output	E3NC-LA51	E3NC-LA9	E3NC-LA54	E3NC-LA0		
ltem	Connecting method	Pre-wired	Wire-saving Connector	M8 Connector	Connector for Sensor Communications Unit		
Ambient temperature r	ange*	Operating: Groups of 1 or 2 Amplifier L Groups of 3 to 10 Amplifier Groups of 11 to 16 Amplifie Groups of 17 to 30 Amplifie Storage: –30 to 70°C (with	Operating: Groups of 1 or 2 Amplifier Units: 0 to $55^{\circ}$ C, Groups of 3 to 10 Amplifier Units: 0 to $50^{\circ}$ C, Groups of 11 to 16 Amplifier Units: 0 to $45^{\circ}$ C, Groups of 17 to 30 Amplifier Units: 0 to $40^{\circ}$ C, Storage: $-30$ to $70^{\circ}$ C (with no icing or condensation)				
Ambient humidity rang	e	Operating and storage: 35% to 85% (with no condensation)					
Altitude		2,000 m max.					
Installation environme	nt	Pollution degree 3 (as per IEC 60947-1)					
Insulation resistance		20 MΩ (at 500 VDC)					
Dielectric strength		1,000 VAC at 50/60 Hz for 1 min					
Vibration resistance (d	estruction)	10 to 55 Hz with a 1.5-mm double amplitude for 2 hours each in X, Y, and Z directions					
Shock resistance (dest	ruction)	500 m/s² for 3 times each in X, Y, and Z directions			150m/s <sup>2</sup> for 3 times each in X, Y, and Z directions		
Weight (packed state/A	mplifier Unit only)	Approx. 115 g/approx. 75 g	Approx. 60 g/approx. 20 g	Approx. 65 g/approx. 25 g			
	Case	Polycarbonate (PC)	·	- ·			
Materials	Cover	Polycarbonate (PC)					
	Cable	Vinyl chloride (PVC)					
Accessories	-	Instruction Manual					

\* When the number of connected units is 11 or more, the ambient temperature is less than 50°C.

## Accessories

#### Reflectors

Item Model	E39-R21	E39-R22	E39-RS10	E39-RS11		
Ambient temperature	Operating: -10 to 55°C; Storage: -25 to 70°C (with no icing or condensation)					
Ambient humidity	Operating/storage: 35% t	to 85% (with no condensat	ion)			
Vibration resistance (destruction)	10 to 55 Hz with a 1.5-m	n double amplitude or 100	m/s <sup>2</sup> for 2 hours each in X	K, Y, and Z directions		
Shock resistance (destruction)	500 m/s <sup>2</sup> 3 times each in	X, Y, and Z directions				
Degree of protection	IEC IP67 (E39-R21 and I	E39-R22 only)				
Materials	Reflective surface: Metha Back surface: Polybutyle		Methacrylic resin (PMMA	)		
Weight (packed state/Reflector only)	Approx. 30 g/approx. 5 g	Approx. 35 g/approx. 10 g	Approx. 26 g/approx. 1 g	Approx. 30 g/approx. 5 g		
Accessories	Instruction manual	•		•		

## Ultra-compact CMOS Laser Sensor: E3NC-S

#### **Sensor Heads**

Sensing method			Distance-settable			
ltem	Model	E3NC-SH250H	E3NC-SH250	E3NC-SH100		
Light source (wavelength)*1		Visible semiconductor laser diode (660 nm), 1 mW (average output: 220 μW) (JIS Class 2, IEC/EN Class 2, and FDA Class 2) Visible semiconductor laser diode (660 nm), 0.5 mW (av output: 100 μW) (JIS Class 1, IEC/EN Class 1, and FDA				
Measureme	nt range	35 to 250 mm (display value: 350	to 2,500)	35 to 100 mm (display value: 350 to 1,000)		
Standard de *2	etected level difference	35 to 180mm: 9 mm 180 to 250 mm: 25 mm		35 to 50 mm: 1.5 mm 50 to 100 mm: 3 mm		
Beam size*:	3	Approx. 1 mm dia. at 250 mm		Approx. 0.5 mm dia. at 100 mm		
Indicators		OUT indicator (orange), STABILIT	ΓΥ indicator (green), and ST indic	ator (blue)		
Ambient illu (Receiver s		Incandescent lamp: 4,000 lx max., Sunlight: 8,000 lx max.	Incandescent lamp: 2,000 lx max., Sunlight: 4,000 lx max.	Incandescent lamp: 4,000 lx max., Sunlight: 8,000 lx max.		
Ambient ter	nperature range	Operating: –10 to 50°C; Storage: –25 to 70°C (with no icing or condensation)				
Ambient hu	midity range	Operating and storage: 35% to 85% (with no condensation)				
Altitude		2,000 m max.				
nstallation	environment	Pollution degree 3 (as per IEC 60947-1)				
Insulation r	esistance	20 M $\Omega$ min. (at 500 VDC)				
Dielectric s	trength	1,000 VAC at 50/60 Hz for 1 min				
Vibration re	esistance (destruction)	10 to 55 Hz with a 1.5-mm double amplitude for 2 hours each in X, Y, and Z directions				
Shock resis	stance (destruction)	500 m/s <sup>2</sup> 3 times each in X, Y, and Z directions				
Degree of p	rotection	IEC IP67				
Connecting	method	Pre-wired connector (Standard cable length: 2 m)				
	Case	Polybutylene terephthalate (PBT)				
Materials	Lens	Methacrylic resin (PMMA)				
	Cable	Vinyl chloride (PVC)				
Weight (pac only)	ked state/Sensor Head	Approx. 125 g/approx. 75 g				
Accessorie	s	Instruction Manual, laser warning label (E3NC-SH250H only)				

Note: Incorrect detection may occur outside the measurement range if the object has a high reflection factor.

\*1. These Sensors are classified as Class 1 laser devices under IEC 60825-1 and the regulations of Laser Notice No. 50 for FDA certification. CDRH (Center for Devices and Radiological Health) registration has been completed. (Accession Number: 1220691)

vices and Radiological reality registration has been completed. (Accession Number, 1220097)
\*2. The values were measured at the center of the sensing distance using OMRON's standard sensing object (white ceramic).
\*3. Beam size: Defined at the 1/e<sup>2</sup> (13.5 %) of the central intensity at the measurement center distance. Measurement may be influenced if there is light leakage outside the defined region and the surroundings of the target object have a high reflectance in comparison to the target object.

Also, when detecting a workpiece that is smaller than the beam size, a correct value may not be obtained.

#### **Amplifier Units**

	Туре			Standard models		Model for Sensor Communications Unit	
	NF	PN output	E3NC-SA21	E3NC-SA7	E3NC-SA24		
		VP output	E3NC-SA51	E3NC-SA9	E3NC-SA54	E3NC-SA0	
tem		ecting method	Pre-wired	Wire-saving Connector	M8 Connector	Connector for Sensor Communications Unit	
nputs/	Outputs		2 outputs	1 output		+4	
outputs	External inputs		1 input			*1	
ower supply	voltage *2		10 to 30 VDC, including	10% ripple (p-p)		Supplied from the connector through the Sensor Communications Unit	
Power consu	mption *3		Eco ON: 1,680 mW ma	e of 24 VDC nW max. (Current consumption ax. (Current consumption: 70 n ax. (Current consumption: 75 m	nA max.)		
				ge: 30 VDC max., open-collect 1 to 3 Amplifier Units: 100 mA nax.			
Control outpu	ıts *4		Residual voltage: At load current of les At load current of 10	s than 10 mA: 1 V max. to 100 mA: 2 V max.		-	
			OFF current: 0.1 mA max	κ.			
External inpu	ts		Refer to *5.				
Indicators			Display direction: Switch OUT indicator (orange), I	o digital display: green, Main di able between normal and reve _/D indicator (orange), ST indic n models with 2 outputs)	rsed.	or (green), and OUT selection	
Protection ci	cuits		Power supply reverse po output reverse polarity p	Power supply reverse polarity protection and output short-circuit protection			
	Super-high-speed mo	de (SHS) *6	Operate or reset: 1.5 ms				
Response	High-speed mode (HS	5)	Operate or reset: 5 ms				
ime	Standard mode (Stnd)	)	Operate or reset: 10 ms				
	Giga-power mode (GI	GA)	Operate or reset: 50 ms				
Sensitivity ac	justment		Smart Tuning (2-point tuning, full auto tuning, 1-point tuning, tuning without workpiece, 2-point area tuning, 1-point area tuning, or area tuning without workpiece), or manual adjustment				
Maximum co	nnectable Units		30			With E3NW-ECT: 30 units * With E3NW-CRT: 16 units With E3NW-CCL: 16 units	
No. of Units	Super-high-speed mo	de (SHS) *6	0				
or mutual	High-speed mode (HS	5)	2				
nterference	Standard mode (Stnd)	)	2				
prevention	Giga-power mode (Gl	GA)	2				
	Timer		Select from timer disable	ed, OFF-delay, ON-delay, one-	shot, or ON-delay + OFF	-delay timer: 1 to 9,999 ms	
	Zero reset		Negative values can be displayed. (Threshold value is shifted.)				
	Resetting settings *8		Select from initial reset (	factory defaults) or user reset (	(saved settings).		
	Eco mode *9		Select from OFF (digital	display lit), ECO ON (digital di	splay not lit), and ECO L	O (digital display dimmed).	
	Bank switching		Select from banks 1 to 4				
	Output 1		Select from Normal dete	ction mode, Area detection mo	de, or hold mode.		
Functions	Output 2		Select from Normal detection mode or Error output mode.	-		Select from Normal detection mode or Error output mode.	
	External input		Select from input OFF, tuning, laser OFF, zero reset, or bank switching				
	Keep function *10		Select from ON or OFF.				
	Background suppress	sion*11	Select from ON or OFF.				
	Hysteresis width		Select from standard set				

PLC operation via Communications Unit enables reading detected values and changing s \*2. Applicable Sensor Head is the series of E3NC-SH (Input/Output 10-30V DC Class 2). settings.

\*2. Applicable Sensor Head is the series of EdNC-SHLL (Input/Output 10-30V DC Glass 2).
\*3. At Power Supply Voltage of 10 to 30 VDC. Normal mode: 2,250 mW max. (Current consumption: 75 mA max. at 30 VDC, 145 mA max. at 10 VDC) Eco ON: 2,010 mW max. (Current consumption: 67 mA max. at 30 VDC, 125 mA max. at 10 VDC) Eco LO: 2,130 mW max. (Current consumption: 71 mA max. at 30 VDC, 135 mA max. at 10 VDC)
\*4. The total for both outputs of a model with 2 outputs is 100 mA max. (Residual voltage: Load current of less than 10 mA: 1 V max., Load current of 10 to 100 mA: 2 V max.). \*5. The following details apply to the input.

		Contact input (relay or switch)	Non-contact input (transistor)	Input time*5-1
N			ON: 1.5 V max. (Sourcing current: 1 mA max.) OFF: Vcc – 1.5 V to Vcc (Leakage current: 0.1 mA max.)	ON: 9 ms min.
PI	NP		ON: Vcc – 1.5 V to Vcc (Sinking current: 3 mA max.) OFF: 1.5 V max. (Leakage current: 0.1 mA max.)	OFF: 20 ms min.

\*5-1.Input time is 25 ms (ON)/(OFF) only when (in tUnE) input is selected. The mutual interference prevention function is disabled if the detection mode is set to super-high-speed mode. When connected to an OMRON NJ-series Controller. \*6.

\*7.

\*8. The bank is not reset by the user reset function or saved by the user save function.

\*9. Eco LO is supported for Amplifier Units manufactured in August 2014 or later. \*10. The output for a measurement error is set. ON: The value of the output from before the measurement error is retained. OFF: The output is turned OFF when a measurement error occurs.

\*11. Only the sensing object is detected when tuning.


	Туре		Standard models		Model for Sensor Communications Unit		
	NPN output	E3NC-SA21	E3NC-SA7	E3NC-SA24	E3NC-SA0		
	PNP output	E3NC-SA51	E3NC-SA9	E3NC-SA54	ESNO-SAU		
Item	Connecting method	Pre-wired	Wire-saving Connector	M8 Connector	Connector for Sensor Communications Unit		
Ambient temperature ra	nge*	Operating: Groups of 1 or 2 Amplifier Ur Groups of 3 to 10 Amplifier L Groups of 11 to 16 Amplifier Groups of 17 to 30 Amplifier Storage: –30 to 70°C (with	Operating: Groups of 1 or 2 Amplifier Units: 0 to 55°C, Groups of 3 to 10 Amplifier Units: 0 to 50°C, Groups of 11 to 16 Amplifier Units: 0 to 45°C, Groups of 17 to 30 Amplifier Units: 0 to 40°C Storage: -30 to 70°C (with no icing or condensation)				
Ambient humidity range	)	Operating and storage: 35% to 85% (with no condensation)					
Insulation resistance		20 MΩ (at 500 VDC)					
Altitude		2,000 m max.					
Installation environmen	t	Pollution degree 3 (as per IE	C 60947-1)				
Dielectric strength		1,000 VAC at 50/60 Hz for 1 min					
Vibration resistance (de	struction)	10 to 55 Hz with a 1.5-mm de	ouble amplitude for 2 hours ea	ach in X, Y, and Z directions			
Shock resistance (destr	uction)	500 m/s² for 3 times each in	150 m/s <sup>2</sup> for 3 times each in X, Y, and Z directions				
Weight (packed state/Ar	nplifier Unit only)	Approx. 115 g/approx. 75 g	Approx. 60 g/approx. 20 g	Approx. 65 g/approx. 25 g			
	Case	Polycarbonate (PC)					
Materials	Cover	Polycarbonate (PC)					
	Cable	Vinyl chloride (PVC)					
Accessories		Instruction Manual					

\* When the number of connected units is 11 or more, the ambient temperature is less than 50°C.


Distance (mm)

# Engineering Data (Reference Value)


## **Beam Diameter Vs. Distance**

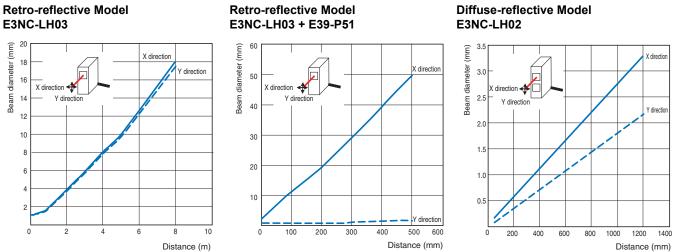


#### **Diffuse-reflective Model** E3NC-LH02 + E39-P52

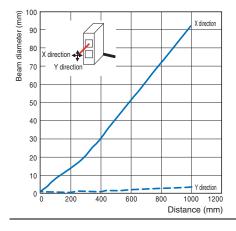


#### Limited-reflective Model E3NC-LH01

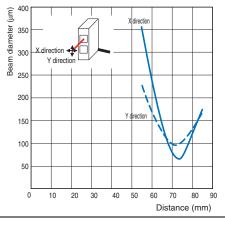

#### **Distance-settable Model** E3NC-SH250/SH250H

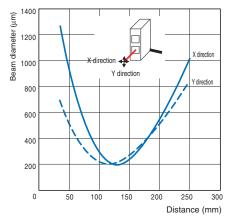

#### **Distance-settable Model** E3NC-SH100

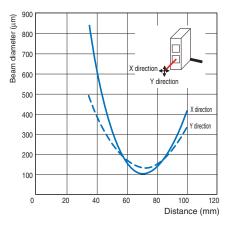

# I/O Circuit Diagrams

NPN Output				
Model	Operation mode	Timing chart	L/D indicator	Output circuit
E3NC-LA21	Light-ON	ch1/ Incident light ch2 No incident light OUT indicator Lit (orange) Not lit Output ON transistor OFF Load Operate (e.g., relay) Reset (Between brown and black (orange) leads)	L lit.	Display OUT1 indicator (orange) Photeeledic Serior main circuit Display OUT1 indicator (orange) Photeeledic Control output Control ou
E3NC-SA21	Dark-ON	ch1/ Incident light ch2 No incident light OUT indicator Lit (orange) Not lit Output ON transistor OFF Load Operate (e.g., relay) Reset (Between brown and black (orange) leads)	n and leads)	30 VDC
E3NC-LA7 E3NC-LA24 E3NC-SA7 E3NC-SA24	Light-ON	Incident light No incident light OUT indicator Lit (orange) Not lit Output ON transistor OFF Load Operate (e.g., relay) Reset (Between brown and black leads)	L lit.	Display OUT indicator (orange)
	Dark-ON	Incident light No incident light OUT indicator Lit Output Output Load (e.g., relay) Reset Between brown and black leads)	D lit.	Note: 1, 2, 3 and 4 are pin terminals of M8 Connector Type.


## **PNP Output**

Model	Operation mode	Timing chart	L/D indicator	Output circuit
E3NC-LA51 E3NC-SA51	Light-ON	ch1/ Incident light ch2 No incident light OUT indicator Lit (orange) Not lit Output ON transistor OFF Load Operate (e.g., relay) Reset (Between blue and black (orange) leads)	L lit.	Display OUT1 indicator OUT2 indicator (orange) (orange) Pink External Pink input Control output Black ch1 - 10 to 30 VDC Orange Load
	Dark-ON	ch1/ Incident light ch2 No incident light (orange) Not lit Output ON transistor OFF Load Operate (e.g., relay) Reset (Between blue and black (orange) leads)	D lit.	
E3NC-LA9 E3NC-LA54 E3NC-SA9 E3NC-SA54	Light-ON	Incident light No incident light OUT indicator Lit (orange) Not lit Output ON transistor OFF Load Operate (e.g., relay) Reset (Between blue and black leads)	L lit.	Display OUT indicator (orange) Pitotelectic Server main Server ma
	Dark-ON	Incident light No incident light OUT indicator Lit (orange) Not lit Output ON transistor OFF Load Operate (e.g., relay) Reset (Between blue and black leads)	D lit.	


## Nomenclature

## Compact Laser Sensors

## E3NC-LA21/LA51/LA0

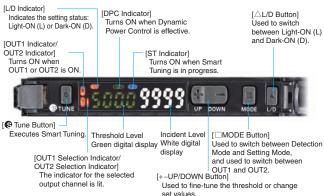


#### E3NC-LA7/LA9/LA24/LA54

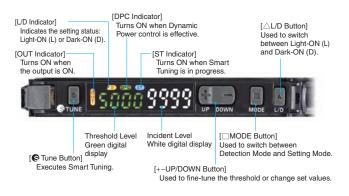

#### Ultra-compact CMOS Laser Sensors E3NC-SA21/SA51/SA0

#### [L/D Indicator] Indicates the setting status: $[\triangle L/D Button]$ Light-ON (L) or Dark-ON (D). [ZERO Indicator] Used to switch between Light-ON (L) Turns ON while a zero reset is set. [OUT1 Indicator/ OUT2 Indicator] Turns ON when and Dark-ON (D). [ST Indicator] Turns ON when Smart OUT1 or OUT2 is ON Tuning is in progress 1000 [ Tune Button] [ MODE Button] Used to switch between Mode and Setting Mode, Measurement Threshold Level Executes Smart Value White digital een Detectior Tuning. Green digital display and used to switch between OUT1 and OUT2. display [OUT1 Selection Indicator/OUT2 Selection Indicator] The indicator for the selected output channel is lit. [+-UP/DOWN Button] Used to fine-tune the threshold or change set values.

#### E3NC-SA7/SA9/SA24/SA54

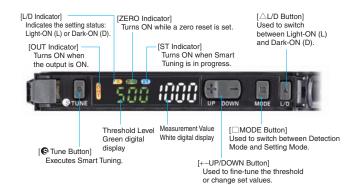

## **Safety Precautions**

#### To ensure safe operation, be sure to read and follow the Instruction Manual provided with the Sensor.

#### Indication and Meaning for Safe Use

	Indicates a potentially hazardous situation which, if not avoided, will result in minor or moderate injury, or may result in serious injury or death. Additionally there may be significant property damage.
Precautions for Safe Use	Supplementary comments on what to do or avoid doing, to use the product safely.
Precautions for Correct Use	Supplementary comments on what to do or avoid doing, to prevent failure to operate, malfunction or undesirable effect on product performance.

## **Sensor Heads**

#### Laser Safety

Various safety standards regarding laser devices are stipulated in Japan and abroad. When this Sensor Head is used in Japan and when it is assembled in Japan but exported to a foreign country, the safety standards are classified into three cases.

#### 1. When Using the Sensor Head in Japan

JIS C6802 stipulates the safety measures that must be observed by the user for each type of laser equipment.

E3NC-LH Sensor Heads: Class 1 E3NC-SH Sensor Heads: Class 1 E3NC-SH H Sensor Heads: Class 2

#### <u> WARNING</u>

Do not expose your eyes to the laser beam either directly or indirectly (i.e., after reflection from a mirror or shiny surface). The laser beam has a high power density and exposure may result in loss of sight.



#### Attention

Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

Do not disassemble the Sensor Head. Doing so may cause the laser beam to leak, resulting in a risk of visual impairment.



- The following laser warning label and laser description labels are attached to the sides of the Sensor Heads.
  - E3NC-LH03 Description Label



E3NC-LH01 /E3NC-LH02



E3NC-SH

E3NC-SHDH



Description Label

ASER

Description Labe



#### 2. Using in the USA

When using devices in which the Sensor Head is installed in the USA, the devices are subject to FDA (Food and Drug Administration) laser regulations of the USA.

#### E3NC-LH03:

These Sensor Heads are classified as Class 1 laser devices under IEC/EN 60825-1 and the regulations of Laser Notice No. 50 for this certification. CDRH (Center for Devices and Radiological Health) registration has been completed. (Accession Number: 1320739)

#### E3NC-LH01, E3NC-LH02:

These Sensor Heads are classified as Class 1 laser devices under IEC/EN 60825-1 and the regulations of Laser Notice No. 50 for this certification. CDRH (Center for Devices and Radiological Health) registration has been completed. (Accession Number: 1220690)

#### E3NC-SH , E3NC-SH H:

These Sensor Heads are classified as Class 1 or Class 2 laser devices under IEC/EN 60825-1 and the regulations of Laser Notice No. 50 for this certification. CDRH (Center for Devices and Radiological Health) registration has been completed. (Accession Number: 1220691)



#### 3. Using in Europe

E3NC-LH , E3NC-SH :: These Sensor Heads are classified in Class 1 under EN 60825-1. E3NC-SH H:

These Sensor Heads are classified in Class 2 under EN 60825-1.

#### **Precautions for Safe Use**

The following precautions must be observed to ensure safe operation of the Sensor Head

- **1.** Installation Environment
- Do not use the Sensor Head in an environment where explosive or flammable gas is present.
- To secure the safety of operation and maintenance, do not install the Sensor Head close to high-voltage devices or power devices.
- 2. Power Supply and Wiring
- Always use an E3NC-LA . E3NC-LA0, E3NC-SA or E3NC-SA0 Amplifier Unit. If a different Amplifier Unit is used, damage or fire may occur.
- If you short the cable, reconnect it as specified. If the connections are not correct, damage or fire may occur.
- High-voltage lines and power lines must be wired separately from the Sensor Head. Wiring them together or placing them in the same duct may cause induction, resulting in malfunction or damage.
- Always turn OFF the power supply before connecting or disconnecting the connectors.
- 3. Installation
- Use screws for installation and tighten the screws securely, but do not exceed the specified tightening torque.
   Specified torque (M3): 0.5 N·m
- 4. Others
- Never disassemble (including removing labels), repair, modify, deform by pressure, or incinerate the Sensor Head. Do not turn the adjuster on the E3NC-LH02 with a force that is greater than 40 mN⋅m. Damage or fire may occur.
- · Dispose of the Sensor Head as industrial waste.
- If you notice any abnormalities, immediately stop using the Sensor Head, turn OFF the power supply, and contact your OMRON representative.
- 5. Conditions of UL
- (Applicable Models: E3NC-LH01/LH02 Only)
- The E3NC-LH series sensor head accessories shall be used with the E3NC-LA amplifiers.

These amplifiers and sensor head accessories shall be installed within a suitable enclosure where all components, including cords and connectors, shall be entirely contained within the same enclosure.

(Applicable Models: E3NC-SH100/SH250 Only)

• The E3NC-SH series sensor head accessories shall be used with the E3NC-SA amplifiers.

These amplifiers and sensor head accessories shall be installed within a suitable enclosure where all components, including cords and connectors, shall be entirely contained within the same enclosure.

6. Shortening the connection cable for use

(Applicable Models: E3NC-LH01/LH02/SH100/SH250 Only) (• The shortened cable has not been evaluated by UL.)

#### **Precautions for Correct Use**

Observe the following precautions to prevent failure to operate, malfunctions, or undesirable effects on Sensor Head performance. 1. Installation Environment

Do not install the Sensor Head in locations subject to the following conditions:

 
- · Ambient temperatures outside of the rated range
- · Condensation caused by rapid changes in temperature
- Relative humidity that is not between 35% and 85%
- Corrosive or flammable gas
- Dust, salt, or iron particles
- Direct vibration or shock
- Strong external light interference (such as other laser beams or electric arc-welding machines)
- · Direct sunlight or near heaters
- · Water, oil, or chemical fumes or spray
- Strong magnetic or electric fields

- 2. Warming Up
- The circuits will be unstable just after the power supply is turned ON, so measurement values may fluctuate gradually.
- For accurate measurements, allow the product to stand for at least 10 minutes after turning ON the power supply before use. (E3NC-S Series)
- 3. Maintenance and Inspection
- Always turn OFF the power supply before adjusting or connecting/ disconnecting the Sensor Head.
- Do not use thinner, benzene, acetone, or kerosene to clean the Sensor Head.
- If large dust particles or dirt adheres to the filter on the front of the Sensor Head, use a blower brush (such as one used to clean camera lenses) to blow it off. Do not blow the dust particles or dirt with your mouth. To remove dust particles or dirt, wipe it off gently with a soft cloth (such as one for cleaning lenses) moistened with a small amount of alcohol. Do not wipe it off with excessive force. Scratches on the filter may cause errors.
- 4. Sensing Object
- The Sensor Head cannot accurately measure objects with the following materials and shapes: Transparent objects (with the E3NC-LH03, objects that are extremely transparent), objects with an extremely low reflection ratio, objects smaller than the spot diameter, objects with a large curvature, excessively inclined objects, etc. Also, for long-distance detection, the Sensor may falsely operate if a white object approaches near the Sensor Head (E3NC-LH03).
- 5. Do not use the Sensor in water, rainfall, or outdoors.
- 6. A ferrite core is attached to the Sensor Head end of the cable connected to the E3NC-LH03 5M. Do not remove the ferrite core or change its position. Also, do not bend the cable within 12 mm of each end of the ferrite core. Doing so may damage the cable.

#### **Attaching a Reflector**

Mount the Reflector as shown in (Correct) below. Errors will be generated if you mount it at the angle shown in (Incorrect). Always install the Reflector at the same angle as the Sensor Head if the head is not mounted vertically or horizontally.


#### Common for all models



Sheet products (E39-RS10/E39-RS11) are peel-off stickers. Peel off the release paper and apply the sheet to a flat surface for installation. If there are any dirt and dust on the installation surface, a reduction in adhesion and deflection of a sheet may occur, resulting in malfunction. **Note:** Beam is irradiated on the glossy surface.

#### Attaching a Lens Attachment (E39-P51 or E39-P52)

 - Check the widths of the slots in the Sensor and the widths of the tabs on the Lens Attachment and attach the Lens Attachment as shown below. (The Lens Attachment must be in the correct orientation, so the widths of the tabs on the Lens Attachment are different on the top and bottom.)
- 2. After you attach the Lens Attachment, make sure that the tabs are completely engaged in the slots in the Sensor.



## **Amplifier Units**

#### <u> WARNING</u>

This Amplifier Unit is not designed or rated for ensuring safety of persons either directly or indirectly.

Do not use it for such purposes.

Do not use the Amplifier Unit with voltage in excess of the rated voltage.

Excess voltage may result in malfunction or fire.

Never use the Amplifier Unit with an AC power supply. Otherwise, explosion may result.



#### **Precautions for Safe Use**

The following precautions must be observed to ensure safe operation of the Amplifier Unit. Doing so may cause damage or fire.

- 1. Do not install the Amplifier Unit in the following locations.
- Locations subject to direct sunlight
- · Locations subject to condensation due to high humidity
- · Locations subject to corrosive gas
- Locations subject to vibration or mechanical shocks exceeding the rated values
- Locations subject to exposure to water, oil, chemicals
- Locations subject to steam
- · Locations subjected to strong magnetic field or electric field
- 2. Do not use the Amplifier Unit in environments subject to flammable or explosive gases.
- **3.** Do not use the Amplifier Unit in any atmosphere or environment that exceeds the ratings.
- To secure the safety of operation and maintenance, do not install the Amplifier Unit close to high-voltage devices or power devices.
- High-voltage lines and power lines must be wired separately from the Amplifier Unit. Wiring them together or placing them in the same duct may cause induction, resulting in malfunction or damage.
- 6. Do not apply any load exceeding the ratings. Otherwise, damage or fire may result.
- 7. Do not short the load. Otherwise, damage or fire may result.
- 8. Connect the load correctly.
- 9. Do not miswire such as the polarity of the power supply.
- **10.**To use this device as connecting with each other, be sure to connect with the same power supply and turn ON the power simultaneously. Using a separate power supply will influence the functions when connecting the devices to use them.
- 11.Do not use the Amplifier Unit if the case is damaged.
- **12.**Burn injury may occur. The Amplifier Unit surface temperature rises depending on application conditions, such as the ambient temperature and the power supply voltage. Attention must be paid during operation or cleaning.
- 13.When setting the sensor, be sure to check safety such as by stopping the equipment.
- **14.**Be sure to turn off the power supply before connecting or disconnecting wires.
- 15.Do not attempt to disassemble, repair, or modify the Amplifier Unit in any way.
- **16.**When disposing of the Amplifier Unit, treat it as industrial waste. **17.**Do not use the Sensor in water, rainfall, or outdoors.
- **18.**UL Standard Certification (Applicable Models: E3NC-LA21/LA51/

SA21/SA51 Only) Only the sensors with Enhanced UL Certification Mark are certified by UL. They are intended to be supplied by a "Class 2 circuit". When used in United States and Canada, Please use the same Class 2 source for input and output. The overcurrent protection current rating is 2A max. They were evaluated as Open type and shall be installed within a enclosure.

#### **Precautions for Correct Use**

- 1. Be sure to mount the unit to the DIN track until it clicks.
- When using the Amplifier Units with Wire-saving Connectors, attach the protective stickers (provided with E3X-CN-series Connectors) on the unused power pins to prevent electrical shock and short circuiting.

When using the Amplifier Units with Connectors for Communications Units, attach the protective caps (provided with E3NW-series Sensor Communications Unit).

Amplifier Unit with Wiresaving Connector Amplifier Unit with Connector for Sensor Communications Unit

Protective cap




ply

- connecting terminals
   Use an extension cable with a minimum thickness of 0.3 mm<sup>2</sup> and less than 10 m long.
- 4. Do not apply the forces on the cord exceeding the following limits: Pull: 40 N; torque: 0.1 N⋅m; pressure: 20 N; bending: 29.4 N
- Do not apply excessive force (9.8 N max.) such as tension, compression or torsion to the connector of the Sensor Head that is fixed to the Amplifier Unit.
- 6. Always keep the protective cover in place when using the Amplifier Unit. Not doing so may cause malfunction.
- It may take time until the received light intensity and measured value become stable immediately after the power is turned on depending on use environment.
- 8. The product is ready to operate 200 ms after the power supply is turned ON.
- 9. The Mobile Console E3X-MC11, E3X-MC11-SV2 and E3X-MC11-S cannot be connected.
- **10.**The mutual interference prevention function does not work when in combination with E3C/E2C/E3X.
- 11. If the unit receives excessive sensor light, the mutual interference prevention function may not work properly, resulting in malfunction of the unit. In such case, increase the threshold.
  12. Standard models (E3NC-□A21/51/7/9)
- 12. Standard models (E3NC-\\_A21/51///9) The Sensor Communications Unit E3X-DRT21-S, E3X-CRT, E3X-ECT and E3NW cannot be connected. Model for Sensor Communications Unit (E3NC-\\_A0) The Sensor Communications Unit E3NW can be connected. E3X-DRT21-S, E3X-CRT, E3X-ECT cannot be connected.
- **13.**If you notice an abnormal condition such as a strange odor, extreme heating of the unit, or smoke immediately stop using the product, turn off the power, and consult your dealer.
- 14.Do not use thinner, benzene, acetone, and lamp oil for cleaning.


## **Dimensions**

## **Sensor Heads**




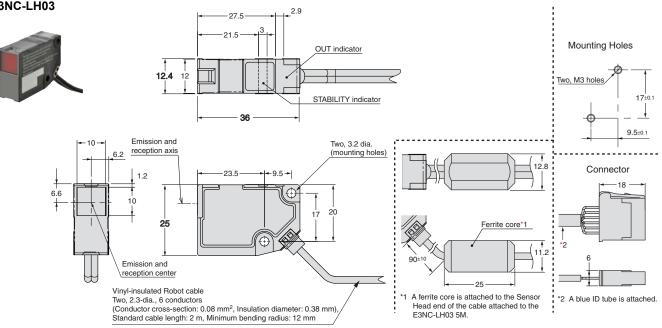

#### Diffuse-reflective Model E3NC-LH02

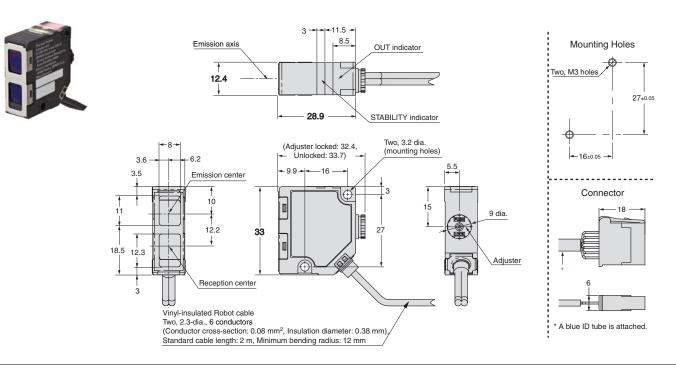

#### Limited-reflective Model E3NC-LH01

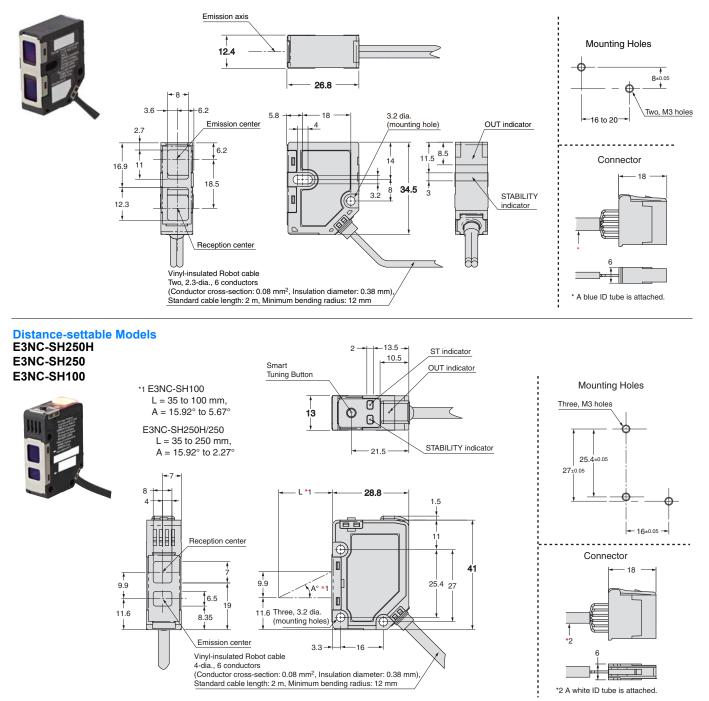

## **Amplifier Units**

33.5

(37)

1203466

32.1

(49.5)


(86.9)

Optical cor

PFP-DN DIN Track

(sold separately)

-(23.8)

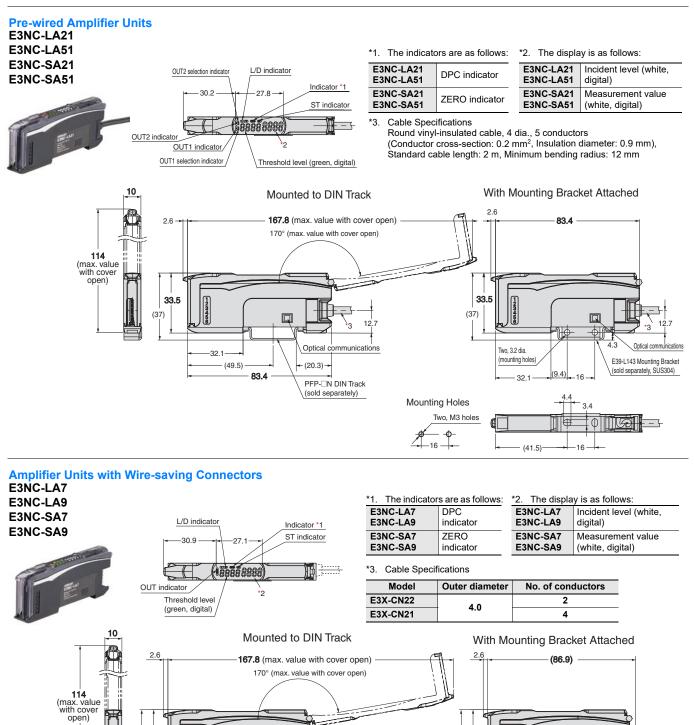

(13)

Wire-saving Connector

(sold separately)

unications

33.5

5

Two, 3.2 dia

(mounting holes)

32.

-(41.5)

Q

Ne

(9.4)

h

16

-16 -

- Øf

5

O D

. htica

(37)

Mounting Holes Two, M3 holes

φ

(13)


Wire-saving

Connecto


communications (sold separately)

E39-L143 Mounting Bracket

(sold separately, SUS304)

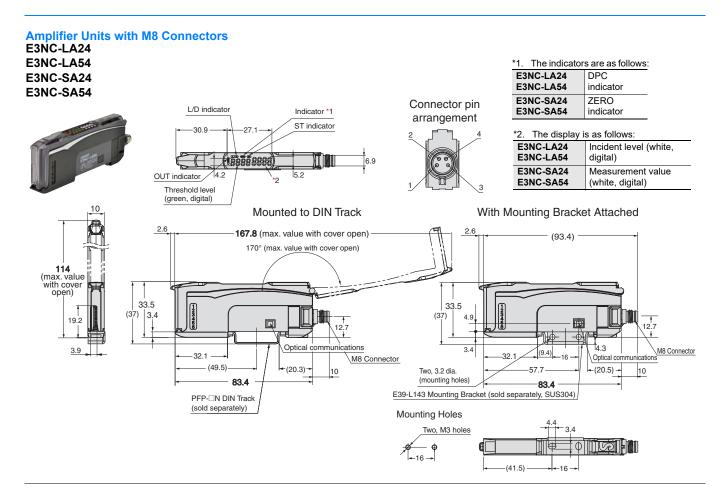


#### Amplifier Units with Connectors for Sensor Communications Unit E3NC-LA0 E3NC-SA0

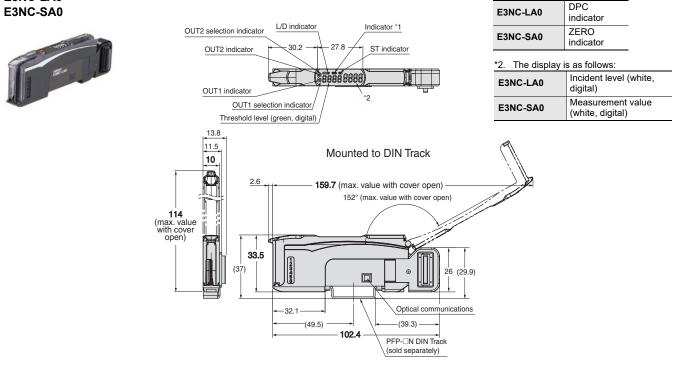

\*1. The indicators are as follows:


## Accessories (Sold Separately)

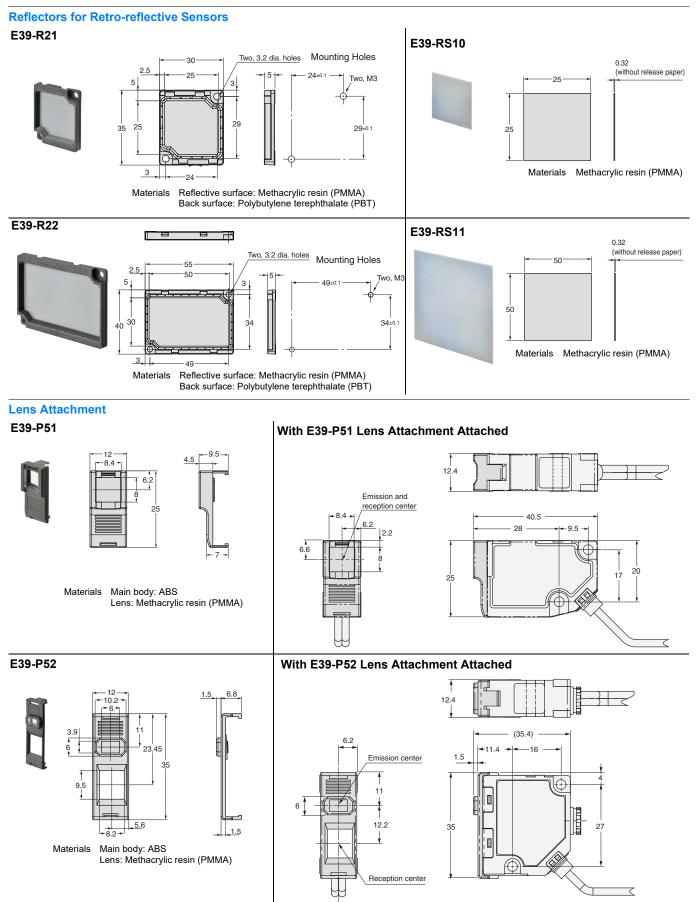


# Sensor Head Mounting Brackets E39-L190






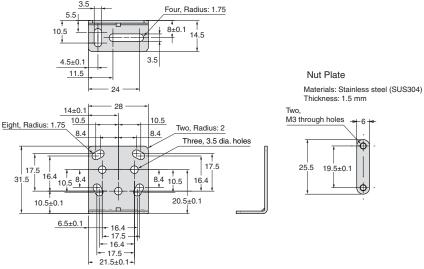

#### With E39-L190 Mounting Bracket Attached for Bottom Mounting

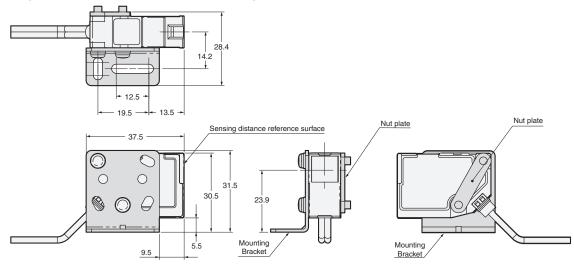


#### With E39-L190 Mounting Bracket Attached for Back Mounting

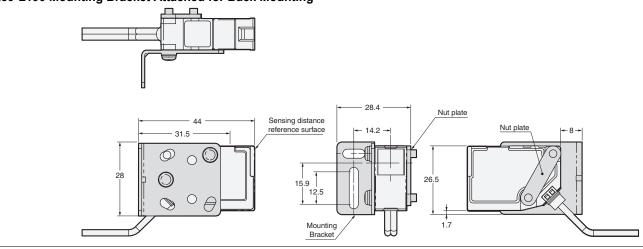


#### E39-L185



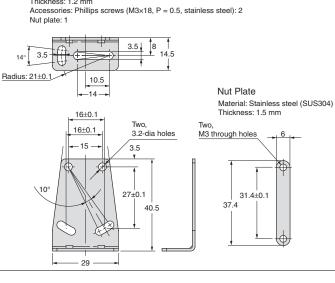

#### With E39-L185 Mounting Bracket Attached

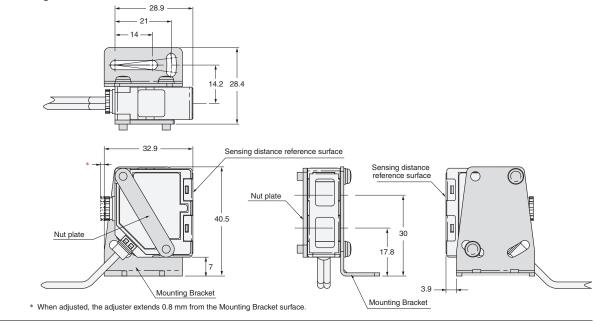


#### E39-L186

#### Mounting Bracket Material: Stainless steel (SUS304)





Material Statilises steel (SCSCC4) Thickness: 1.2 mm Accessories: Phillips screws (M3x18, P = 0.5, stainless steel): 2 Nut plate: 1

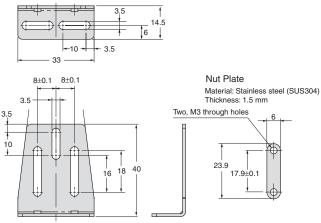


## E3NC
 
#### With E39-L186 Mounting Bracket Attached for Bottom Mounting

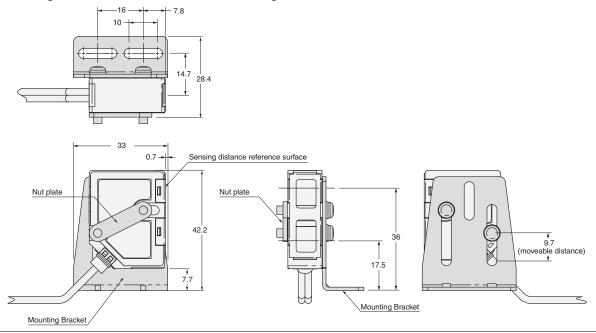




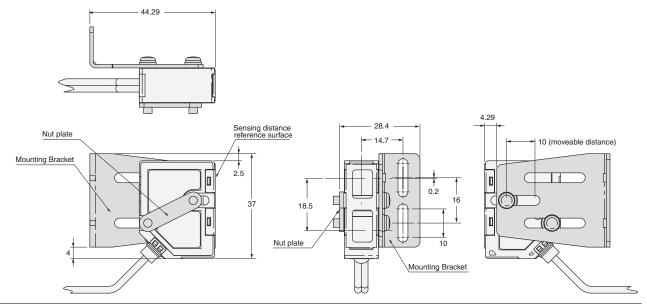


#### E39-L187




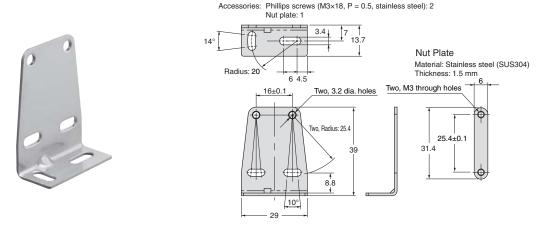


With E39-L187 Mounting Bracket Attached

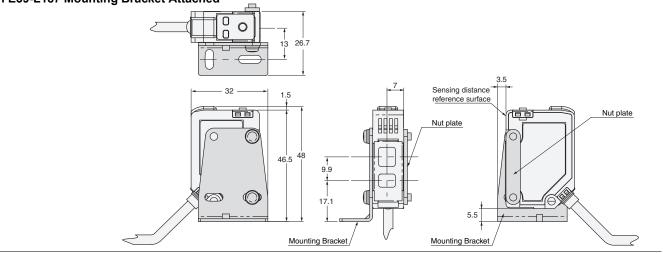

#### E39-L188

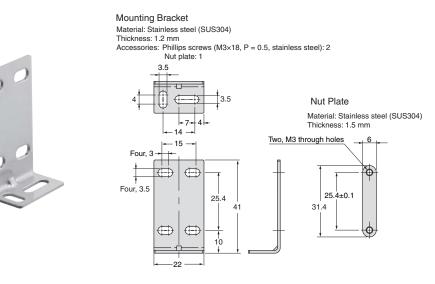


#### With E39-L188 Mounting Bracket Attached

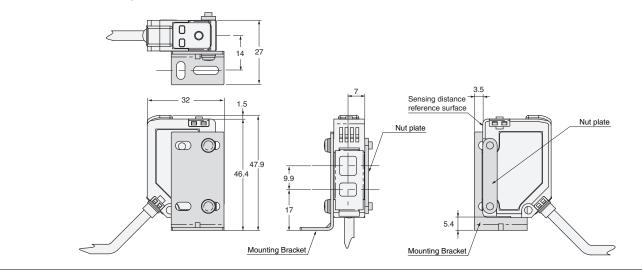

#### Wire-saving Connectors

#### Master Connector E3X-CN21




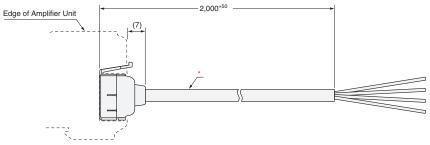

\*4-dia. cable with 4 conductors, Standard cable length: 2 m (Conductor cross-section: 0.2 mm<sup>2</sup> (AWG24), Insulation diameter: 1.1 mm)


#### Slave Connector E3X-CN22



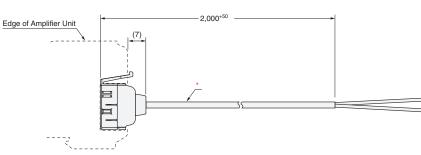


\*4-dia. cable with 2 conductors, Standard cable length: 2 m (Conductor cross-section: 0.2 mm<sup>2</sup> (AWG24), Insulation diameter: 1.1 mm)

## Sensor I/O Connectors

 


L-shaped XS3F-M422-40 -A




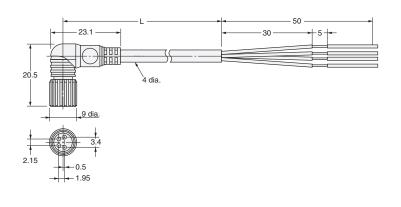

#### Amplifier Unit Mounting Bracket E39-L143

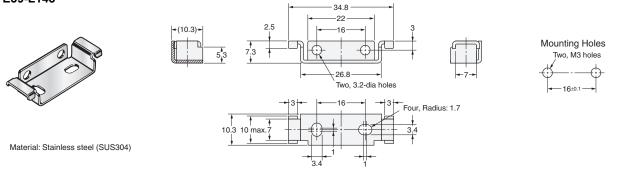


#### DIN Track PFP-100N PFP-50N

 

Material: Aluminum

#### PFP-100N2

 



Material: Aluminum

#### End Plate PFP-M





 

 

Materials: Iron, zinc plating

Read and understand this catalog.

Please read and understand this catalog before purchasing the products. Please consult your OMRON representative if you have any questions or comments.

Warranties.

(a) Exclusive Warranty. Omron's exclusive warranty is that the Products will be free from defects in materials and workmanship for a period of twelve months from the date of sale by Omron (or such other period expressed in writing by Omron). Omron disclaims all other warranties, express or implied.

(b) Limitations. OMRON MAKES NO WARRANTY OR REPRESENTATION, EXPRESS OR IMPLIED, ABOUT NON-INFRINGEMENT, MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE OF THE PRODUCTS. BUYER ACKNOWLEDGES THAT IT ALONE HAS DETERMINED THAT THE

PRODUCTS WILL SUITABLY MEET THE REQUIREMENTS OF THEIR INTENDED USE.

Omron further disclaims all warranties and responsibility of any type for claims or expenses based on infringement by the Products or otherwise of any intellectual property right. (c) Buyer Remedy. Omron's sole obligation hereunder shall be, at Omron's election, to (i) replace (in the form originally shipped with Buyer responsible for labor charges for removal or replacement thereof) the non-complying Product, (ii) repair the non-complying Product, or (iii) repay or credit Buyer an amount equal to the purchase price of the non-complying Product; provided that in no event shall Omron be responsible for warranty, repair, indemnity or any other claims or expenses regarding the Products unless Omron's analysis confirms that the Products were properly handled, stored, installed and maintained and not subject to contamination, abuse, misuse or inappropriate modification. Return of any Products by Buyer must be approved in writing by Omron before shipment. Omron Companies shall not be liable for the suitability or unsuitability or the results from the use of Products in combination with any electrical or electronic components, circuits, system assemblies or any other materials or substances or environments. Any advice, recommendations or information given orally or in writing, are not to be construed as an amendment or addition to the above warranty.

#### Limitation on Liability; Etc.

OMRON COMPANIES SHALL NOT BE LIABLE FOR SPECIAL, INDIRECT, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, LOSS OF PROFITS OR PRODUCTION OR COMMERCIAL LOSS IN ANY WAY CONNECTED WITH THE PRODUCTS, WHETHER SUCH CLAIM IS BASED IN CONTRACT, WARRANTY, NEGLIGENCE OR STRICT LIABILITY.

Further, in no event shall liability of Omron Companies exceed the individual price of the Product on which liability is asserted.

#### Suitability of Use.

Omron Companies shall not be responsible for conformity with any standards, codes or regulations which apply to the combination of the Product in the Buyer's application or use of the Product. At Buyer's request, Omron will provide applicable third party certification documents identifying ratings and limitations of use which apply to the Product. This information by itself is not sufficient for a complete determination of the suitability of the Product in combination with the end product, machine, system, or other application or use. Buyer shall be solely responsible for determining appropriateness of the particular Product with respect to Buyer's application, product or system. Buyer shall take application responsibility in all cases.

NEVER USE THE PRODUCT FOR AN APPLICATION INVOLVING SERIOUS RISK TO LIFE OR PROPERTY OR IN LARGE QUANTITIES WITHOUT ENSURING THAT THE SYSTEM AS A WHOLE HAS BEEN DESIGNED TO ADDRESS THE RISKS, AND THAT THE OMRON PRODUCT(S) IS PROPERLY RATED AND INSTALLED FOR THE INTENDED USE WITHIN THE OVERALL EQUIPMENT OR SYSTEM.

#### Programmable Products.

Omron Companies shall not be responsible for the user's programming of a programmable Product, or any consequence thereof.

#### Performance Data.

Data presented in Omron Company websites, catalogs and other materials is provided as a guide for the user in determining suitability and does not constitute a warranty. It may represent the result of Omron's test conditions, and the user must correlate it to actual application requirements. Actual performance is subject to the Omron's Warranty and Limitations of Liability.

#### Change in Specifications.

Product specifications and accessories may be changed at any time based on improvements and other reasons. It is our practice to change part numbers when published ratings or features are changed, or when significant construction changes are made. However, some specifications of the Product may be changed without any notice. When in doubt, special part numbers may be assigned to fix or establish key specifications for your application. Please consult with your Omron's representative at any time to confirm actual specifications of purchased Product.

Errors and Omissions.

Information presented by Omron Companies has been checked and is believed to be accurate; however, no responsibility is assumed for clerical, typographical or proofreading errors or omissions.