

OMRON

Contact-Type Smart Head (Detection Type)

Model **E9NC-TH□□Series**

INSTRUCTION SHEET

Thank you for selecting OMRON product. This sheet primarily describes precautions required in installing and operating the product. Before operating the product, read the sheet thoroughly to acquire sufficient knowledge of the product. For your convenience, keep the sheet at your disposal. Refer to the user's manual for details.

The following notice applies only to products that carry the CE mark:
Notice:
This is a class A product. In residential areas it may cause radio interference, in which case the user may be required to take adequate measures to reduce interference.

© OMRON Corporation 2013 All Rights Reserved.

PRECAUTIONS ON SAFETY

●Keys to Warning Symbols

	Indicates a potentially hazardous situation which, if not avoided, will result in minor or moderate injury, or may result in serious injury or death. Additionally there may be significant property damage.
--	--

●Explanation of signs

	●Warning: Electric Shock Indicates a risk of electric shock under certain conditions.
	●Resolution prohibition Indicates prohibition when there is a risk of minor injury from electrical shock or other source if the product is disassembled.

●Alert Statements

	WARNING Do not forcibly bend or pull the cables. Do not put a heavy object on them or heat them. Doing so may damage the cables, resulting in a fire.
	Do not disassemble or alter the unit. There is a risk of injury or electric shock. And it may cause damage on the internal circuit.

PRECAUTIONS FOR SAFE USE

Please observe the following precautions for safe use of the products.

- (1)Installation Environment
 - Do not use the product in environments where it can be exposed to inflammable/explosive gas.
 - To secure the safety of operation and maintenance, do not install the product close to high-voltage devices and power devices.
- (2)Power Supply and Wiring
 - Be sure to use a dedicated amplifier unit (E9NC-TA□□). Connecting to other amplifier unit may cause damage or fire.
 - When shortening cables, be sure to connect wires according to the specifications.
 - Misconnection may cause damage or fire.
 - High-Voltage lines and power lines must be wired separately from this product. Wiring them together or placing them in the same duct may cause induction, resulting in malfunction or damage.
 - Always turn off the power of the unit before connecting or disconnecting cables.
 - To prevent cables to cut, fix it in a place where too much tension should not be applied to it.
 - Avoid pulling cables too strongly or bending them too much.
 - Repeated flexing: R50 or more
 - Permanent bend: R20 or more
 - Head and output cables must be placed separately from the power line.
- (3)Installation
 - Use screws or tightening nut for mounting and be sure to tighten screws with a specified torque.
 - Specified torque: M3 screw:0.6N·m Tightening nut:1.0N·m
- (4)Applicable standards
 - EN61326-1
 - Electromagnetic environment : Industrial electromagnetic environment (EN/IEC 61326-1 Table 2)

- (5)Other Rules
 - Do not attempt to disassemble, deform by pressure, incinerate, repair, or modify this product.
 - When disposing of the product, treat as industrial waste.
 - If you notice an abnormal condition such as a strange odor, extreme heating of the unit, or smoke, immediately stop using the product, turn off the power, and consult your dealer.

PRECAUTIONS FOR CORRECT USE

Please observe the following precautions to prevent failure to operate, malfunctions, or undesirable effects on product performance.

- (1)Do not install the product in locations subjected to the following conditions:
 - Surrounding air temperature outside the rating
 - Rapid temperature fluctuations (causing condensation)
 - Relative humidity outside the range of 35 to 85%
 - Presence of corrosive or flammable gases
 - Presence of dust, salt, or iron particles
 - Direct vibration or shock
 - Water, oil, or chemical fumes or spray, or mist atmospheres
 - Presence of intense magnetic, electric field or high frequency electric field (use the product in a place distant from a noise source such as high power relay and high-voltage high-current switch by 0.5 m or more)

- (2)Warming up
 - The circuitry is not stable immediately after turning the power ON, and the values gradually change until the Sensor Head is completely warmed up.
 - Before using the product, check that its functionality and capability are normal.
- (3)Maintenance and inspection
 - Always turn off the power of the unit before connecting or disconnecting cables.
 - Do not use thinner, alcohol, benzene, acetone, or kerosene to clean the sensor.
 - If oil that becomes extremely viscous when it's dry, such as cutting oil, attaches to the rubber boot, the operation may not work properly.
 - Wipe off with a waste cloth dampened with absolute alcohol.
 - The rubber boot may be significantly degraded by organic solvent or ozone in the air or ultraviolet rays in the environment. In such cases, replace the rubber boot regularly (6 months to a year).
 - Rubber boots are coated with grease. Please do not remove the grease when the rubber boot is used, since sliding movement may be degraded if it is removed.
 - When it used after wiping off the oil, perform regular maintenance not to rust. Be sure to check that there is no influence on the measurement due to the oil when it is used with the oil.

■ Do not use this product under water, rain or outdoors.

Checking the package contents



- Head x1
- Wrench x1
- Hose elbow x1 (E9NC-TH□□□)
- Clamp spanner, Pin, Tightening nut, Wave washer x1 each (E9NC-TH□□□F)
- Manual (this paper) x1 each (Japanese, English, Chinese)


■ Shortening the connection cable for use


■ Shortening the connection cable for use

Push the operation lever at the operation slot with the slotted screwdriver and pull out the wire to adjust the cable length. The tip of the screwdriver must be 2 mm or less. The type of screwdriver whose tip width becomes broaden toward its root cannot be used.

■ Procedure to connect the connector

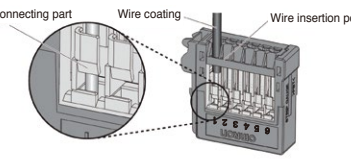- (1) According to "STRIP GAUGE" shown on the side of the product, strip the coating of the shield for 20 mm or less, strip the coating of the core wire for 7 to 8 mm, and twist the wire for several times.
- (2) Insert the wire all the way to the wire insertion slot. Make sure that the wire coating is located inside the wire insertion slot and the tip of the conductor passes through the connection part. Connect wires as follows. Terminal No.1: Brown, No.2: Shield, No.3: White, No.4: Red.

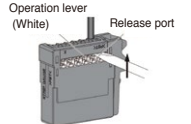- (3) Push the slotted screwdriver all the way to the releasing slot and pry the slotted screwdriver up and down lightly. When you feel a click on the slotted screwdriver, pry it to the reverse direction of the wire insertion direction. The operation lever will recover with a click sound.

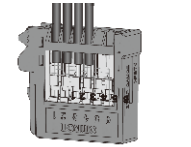- (4) Check that the operation lever recovers and the wire coating enters into the wire insertion slot. The shield wire cover must not be shorted circuited. (The wires are connected when you pull the wire and feel a resistance.)


■Using air supply

(E9NC-TH5L/E9NC-TH5LF/E9NC-TH12L/E9NC-TH12LF)

- The suction air must be dry air with a negative pressure of 0.04 to 0.067 MPa.
- The outside diameter of the tube for air suction inlet must be 4 mm.
- Air suction draws the spindle in.
- If the spindle extrusion rate is high, the amplifier indication may display an error when a workpiece is contacted.
- Too much impact may shift the ball retainer inside the bearing, resulting in less operating range. If so, adjust the spindle rate.


■Installation

1. Remove the cap.

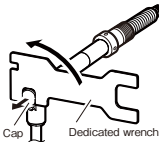


2. Attach the hose elbow.


Manually tighten the M5 screw until the gasket contacts the wall. Then use the dedicated wrench to tighten by 90°.

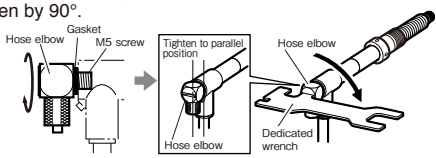

3. Attach Ø4 mm tube.

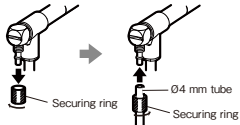

1. Dimensions

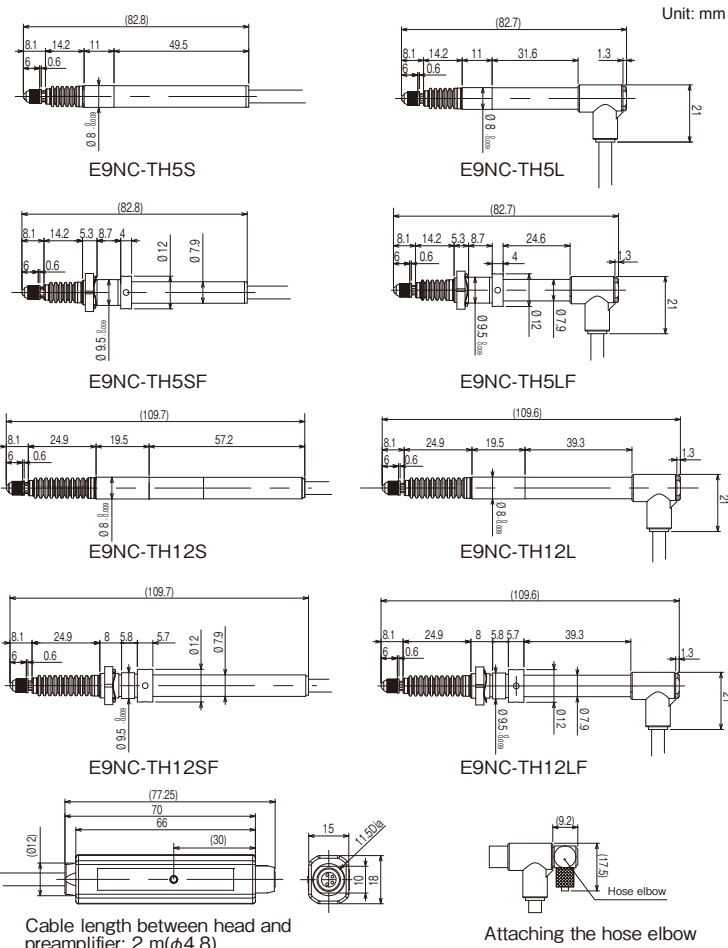

2. Display of preamplifier block


	Operation Indicator
LED Indication Status	Meanings
Off	Non-energized
Flashing blue	Energized, origin point not passed yet, or origin point detecting
Blue light ON	Energized, origin point detected (with origin point use setting ON)
Red light ON	Head speed error
Flashing red	Head circuit failure

3. Installing Heads

<Straight Model>

(E9NC-TH5S/E9NC-TH5L/E9NC-TH12S/E9NC-TH12L)


- Mounting head, be sure to grab the stem.
- To attach the head to other equipment, avoid securing it on a position where a screw directly contacts this product.
- As this product uses a ball bearing, tightening the stem too much could damage the measurement axis, resulting in crippled movement.
- To attach it to equipment using a holder, use the <recommended mounting jig> with specified tightening torque of 0.6 N·m to secure.
- Attach the stem so that the slotted block should be tightened by the screw. Never attach the stem by cutting screw thread in the Ø8 mm hole and by screwing the stem with a setscrew. Or sliding movement or precision may be degraded.

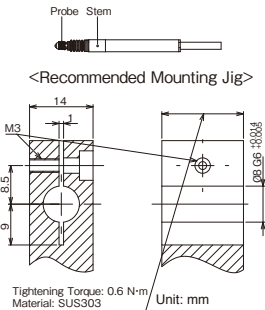

<Flanged Model>

(E9NC-TH5SF/E9NC-TH5LF/E9NC-TH12SF/E9NC-TH12LF)

- Recommended diameter of the hole to attach the head is Ø9.7±0.15 mm.
- The mounting plate thicknesses are shown below:
E9NC-TH5SF/E9NC-TH5LF: 9 to 11 mm
E9NC-TH12SF/E9NC-TH12LF: 7 to 11 mm
- To attach the head, always use the accessory tightening nut, wave washer, clamp spanner, and pin that come with the product. The tightening torque shall be applied so that the wave washer should be completely flat.
- Recommended tightening torque: 1.0 N·m
Maximum tightening torque: 2.0 N·m

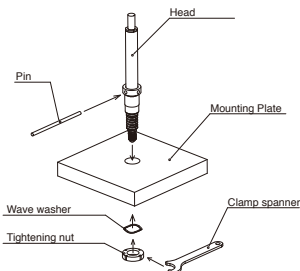


ATTENTION

- To prevent cables to cut, fix it in a proper place. Avoid pulling cables too strongly or bending them too much.
- The degree of parallelization affects the precision of detection. Use the mounting bracket (or sleeve) so that it should be kept within 0.3 mm for 100 mm of movement.
- Do not apply force to rotation direction after securing the stem. Or it may be damaged.

4. Attaching the probe

- Use the dedicated wrench that comes with the product for attaching and detaching the probe. Do not apply torque of 0.1 N·m or more to the spindle during the task. Otherwise damage may result.
- Unless you use a flat probe, it is recommended to use the accessory spring washer of nominal 2.5 or screw lock to prevent the probe to loosen. (Reference tightening torque value: 0.05 to 0.06 N·m)

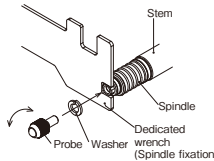

5. Specifications

Model	E9NC-TH5S/E9NC-TH5SF E9NC-TH5L/E9NC-TH5LF	E9NC-TH12S/E9NC-TH12SF E9NC-TH12L/E9NC-TH12LF
Measuring range(Moving range)	5mm	12mm
Resolution	0.1 μm	
Precision (at 20 °C)	1 μm	
Measuring force	Set upward Set horizontal Set downward	0.35±0.25N 0.4±0.3N 0.45±0.25N 0.4±0.25N 0.5±0.3N 0.6±0.3N
Ambient temperature	Operating: -10 to 55°C, storage: -20 to 60°C (with no icing or condensation)	
Ambient humidity	Operating and storage: 35% to 85% (with no condensation)	
Maximum response speed	80m/min	
Origin detection speed	80m/min	
Origin position	1±0.5 mm from the lowest point of spindle extrusion position	
Degree of protection	Head: *1, Preamplifier: IEC IP40	
Vibration resistance	100m/s²(20~2000Hz) 20 min each in X, Y, and Z directions	
Shock resistance	1000m/s² 3 times each in X, Y, and Z directions	
Number of sliding	92 million times (based on Omron's dedicated evaluation)	
Material	Head Probe Rubber boot Cable Preamplifier Tightening nut Wave washer	SUS303 Carbide NBR PVC ABS SUS410 (E9NC-TH□□□F only) SK5 (E9NC-TH□□□F only)
Weight (packed state/main unit only)	Approx. 340g/approx. 110g	
Probe	With spherical surface of carbide, thread size of M2.5	
Accessories	Instruction Sheet, Wrench, Hose elbow (E9NC-TH□□□) Accessory for flanged model only (E9NC-TH□□□F)*1	

- *1. E9NC-TH□□□ When using the hose elbow IEC IP67
E9NC-TH□□□ When not using the hose elbow
E9NC-TH□□□F only
- *2. Clamp wrench, Pin, Tightening nut, Wave washer

Suitability for Use

Omron Companies shall not be responsible for conformity with any standards, codes or regulations which apply to the combination of the Product in the Buyer's application or use of the Product. At Buyer's request, Omron will provide applicable third party certification documents identifying ratings and limitations of use which apply to the Product. This information by itself is not sufficient for a complete determination of the suitability of the Product in combination with the end product, machine, system, or other application or use. Buyer shall be solely responsible for determining appropriateness of the particular Product with respect to Buyer's application, product or system. Buyer shall take application responsibility in all cases.

NEVER USE THE PRODUCT FOR AN APPLICATION INVOLVING SERIOUS RISK TO LIFE OR PROPERTY WITHOUT ENSURING THAT THE SYSTEM AS A WHOLE HAS BEEN DESIGNED TO ADDRESS THE RISKS, AND THAT THE OMRON PRODUCT(S) IS PROPERLY RATED AND INSTALLED FOR THE INTENDED USE WITHIN THE OVERALL EQUIPMENT OR SYSTEM.

See also Product catalog for Warranty and Limitation of Liability.

E9NC-TH□□Series

